



1. Operating Instructions

1-1 Plug the DC output of the power adaptor into the charger and the AC plug into AC outlet.

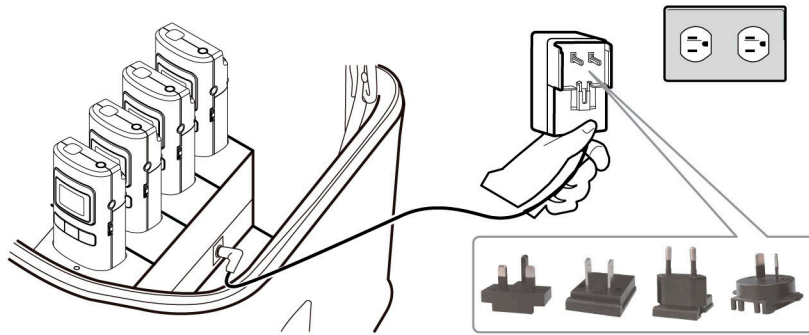

1-2 Insert the transmitter or receiver into the compartment in accordance with direction as shown in the picture below.

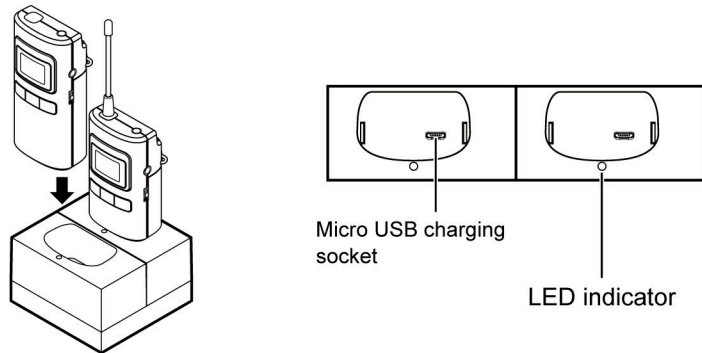

1-3 LED Indication

Red	Charging
Green	Fully charged
Light off	<p>Not charging</p> <p>⚠ The device is not properly inserted into the charging compartment or does not securely touch the USB charging port</p>
Slow Red Flash	<ul style="list-style-type: none"> • There is no battery in the device • Non-rechargeable battery has been detected • The battery has been damaged <p>⚠ Remove the device from the charger and replace the battery.</p> <p>⚠ Do not attempt to recharge none-rechargeable battery such as disposable batteries, broken batteries and etc.</p>
Fast flash 5 times	<p>Synchronization is currently in progress (To perform synchronization, please purchase extra Sync Kit.)</p>

2. Caution

- Keep this equipment dry and secure, and away from fire.
- Do not place this equipment in direct sunlight or a humid environment.
- Do not drop or shake this equipment.